

fwDeviceComment

— User Manual —

CERN, BE-ICS-FD

December 17, 2019

Contents

1	Introduction	1
1.1	About this document	2
2	Device comments for single devices	2
2.1	Prerequisites	2
2.2	Means of user interaction	2
2.3	Classification	3
2.4	The widget	3
2.5	The comments panel and the faceplate	3
2.6	The editing panel	5
3	Advanced management of device comments	6
A	Management of the access rights for device comments	8
B	Propagation of the access rights for device comments to remote systems	9

1 Introduction

The `fwDeviceComment` component is part of the UNICOS framework and it provides a convenient way to attach short comments to UNICOS devices. A typical use case of the component is for a user to indicate a degraded mode of operation of a remote device, such as being out of order or undergoing maintenance, or to signal to other interested parties some other special conditions, such as upper and lower limits for various parameters, the meaning of a specific set-point, etc.

1.1 About this document

The present user manual provides a brief overview of the component capabilities and describes the most common functionality regularly employed in a production environment. The intended readership of this document consists of new users wanting to get acquainted with the `fwDeviceComment` component.

All the functionality and illustrations presented herein refer to version:

- 8.3.0-SNAPSHOT-201901202119

The source code of the component is hosted in a GitLab repository available at:

- <https://gitlab.cern.ch/jcopfw/tools/fwDeviceComment>

2 Device comments for single devices

This section will explain how to make use of the device comment functionality for single devices, in the framework of a UNICOS project, detailing the most common operations performed in production.

2.1 Prerequisites

In order to use the `fwDeviceComment` component, a WinCC OA project with the UNICOS framework installed is required. Since device comments can only be attached to devices, a UNICOS application must be imported prior to employing the component.

2.2 Means of user interaction

The user can typically interact with the device comments via three main mechanisms, by using the following objects of the human-machine interface:

Widget	Shows a status indicator signaling that comments are active ¹ for the associated device. No other comment information is displayed.
Faceplate / Panel	Displays the text of the active comments, along with other meta-data. Comments are displayed read-only.
Editing panel	Displays the text and all the meta-data of all comments, active and inactive, for the selected device. The user can add, activate or deactivate one comment at a time and can delete one or multiple comments.

¹See subsection 2.3 for details.

There is also a fourth possibility of interacting with the device comments of multiple devices, which is detailed in section 3, and is which referenced here for completeness:

Management panel Displays the text and all the meta-data of all comments, active and inactive, for multiple devices. The user can perform complex queries for device comments on multiple systems in addition to activating, deactivating or deleting multiple comments simultaneously.

Details of the interaction with the device comments via each of the aforementioned graphical objects are provided further in the document.

2.3 Classification

The device comments can be in either one of two states:

- Activated** Enables the dedicated indicator of the device widget that there are active comments; the comment information is displayed in the comment panel and/or in the device faceplate.
- Deactivated** Does not enable the dedicated indicator of the device widget; the comment information is hidden in the comment panel and/or in the device faceplate.

2.4 The widget

The widget graphical object provides a simple mean to indicate whether any of the comments for its associated device are active. Figure 1a illustrates a widget for a device having active comments, while figure 1b shows the widget for the same device, but with no active comments. The widget provides, thus, only a read-only, high-level binary indication of whether a device has, or does not have, any active comments.

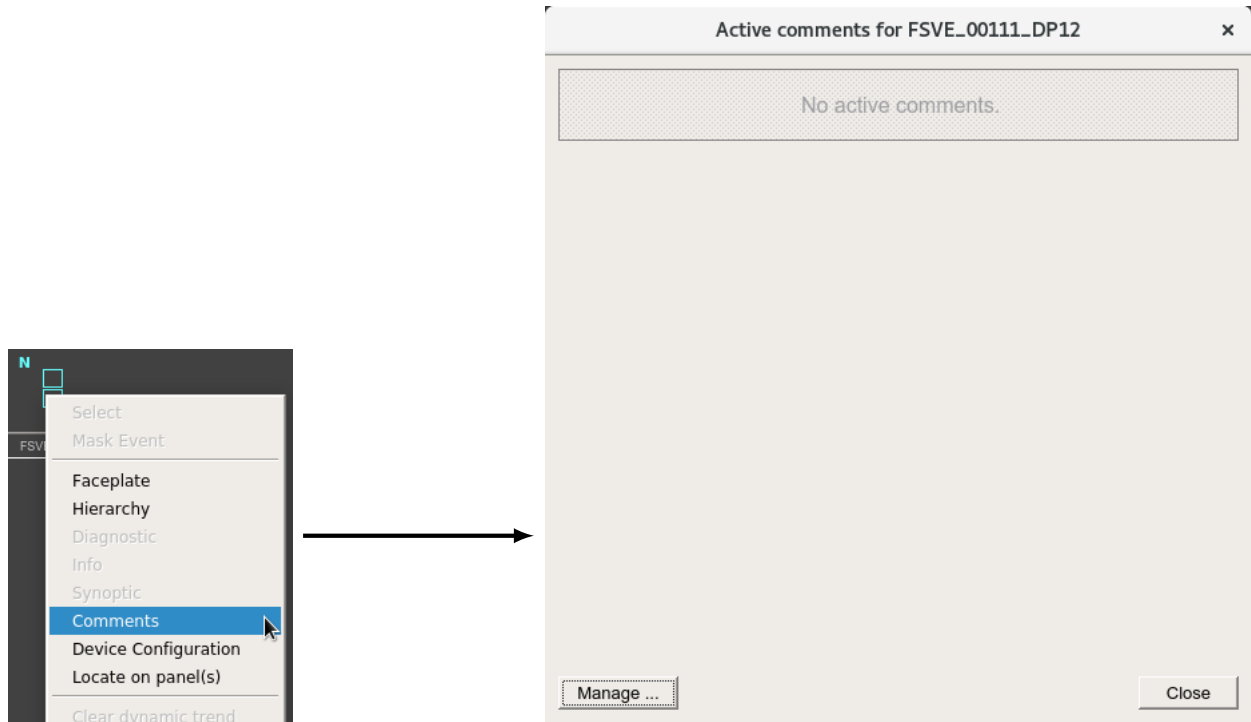


Figure 1: The widget of a device with (a) and without (b) device comments.

2.5 The comments panel and the faceplate

While the widget provides a way to identify at a cursory glance whether a device has any active comments or not, it does not actually provide any information about the content and the meta-data of the comments themselves.

The simplest way to display the active comments associated with a device is to open comments panel by right-clicking the device to bring up the contextual menu and selecting the **Comments** entry, as illustrated in figure 2.



(a) Widget contextual menu

(b) Device comments panel

Figure 2: Displaying the device comments panel (b) from the contextual menu widget (a). The illustration pertains to the case of a device with no active comments.


Alternatively, the device comments can also be displayed in the faceplate of the device. The graphical display of the comments is identical, with the exception that in this case the comments panel is embedded in the faceplate. To activate this view, either double-click or right-click the device to bring up the contextual menu and then select the **Faceplate** entry, as shown in figure 3. The list of active comments will be displayed in the **Comments** tab of the faceplate.

As can be seen in figure 3b, the embedded comments panel displays the following information pertaining to the active comment:

- the time-stamp when the comment was either created or last activated;
- the user who added the comment (next to the time-stamp);
- the comment text itself (first line below the time-stamp);
- the additional information for the comment (second line below the time-stamp);


Both mean of displaying comment information presented in this subsection are read-only, i.e. there is no way through which the user can interact with the device comments, in order to add, (de)activate or delete them. To modify the comments, the editing panel described in subsection 2.6 needs to be employed. In order to open the editing panel, the **Manage ...** button in figures 2b or 3b needs to be clicked.

The comments editing panel consists of a main tabular interface displaying all the comments associated with the device in reverse chronological order, whether active or inactive. The following fields are listed in the central table of the panel:

- the time-stamp when the comment was either created or last activated;
- the user who has authored the comment;
- the comment text;
- the additional information for the comment;
- the name of the WinCC OA system which contains the device;
 This may be a different system than the one where the comment originated from.
- the hostname where the WinCC OA system containing the device is running;
- the status of the comment, which can be either active or inactive.

The interface also presents various controls for deleting a single or multiple comments on the top right side of the panel. For adding a new comment, the user may fill in the comment text and any additional information using the two text fields below the main table, selecting the state of the comment via the combo box (active/inactive) and by pressing the comment insertion button.

An option to export the comment information table for the current device is also provided and can be activated by clicking the button in the lower left corner of the interface.

 It may occur that some or all of the graphical interface elements are disabled, i.e. their appearance is grayed-out. This usually indicates that the currently logged-in user does not have the privileges required to perform certain operations on the device comments. The user may check the required privileges by clicking on the **Comment rights** button which will open the management panel for comment access rights, illustrated in figure 7. Using this panel requires specific knowledge regarding the users access rights and privileges and should be done only by the industrial controls expert or system administrator.

3 Advanced management of device comments

The previous section has discussed the mechanisms through which a user can interact with the device comments of a single device. However, there is sometimes the need to apply bulk operations, i.e. activation, deactivation and deletion, to a large number of comments distributed among a multitude of devices. One such use-case could be, for instance, deleting all the old comments for the devices of a subsystem that has just come out of maintenance mode. For this and other similar purposes the device comments management panel, illustrated in figure 5, is the appropriate interface.

The top part of the panel presents the user with a plethora of filtering options, through which device comments meeting certain criteria will be retrieved and displayed in the central tabular part. The array of filtering options is diverse and allows searching for comments that, e.g.,

1 - Device Comments

Application: HVAC_B245

Nature: *

Device: *

System: *

Device type: *

Domain: *

User: *

Host: *

Start: 30/12/2018 15:42:33

End: 29/01/2019 15:42:33

☒ Enable
Time zone: LOCAL

Comment: *

Active: TRUE

Max Rows: 1500

Displaying: 101 of 195

Reset

Apply

Application	Device	Time	User	Comment	Additional information	System	Host
HVAC_B245	FSVE_00111_DP11	2019.01.25 11:38:07	operator	Tydidies Wahabit	heediness schizostelic waists	dist_1:	pcen35395
HVAC_B245	FSVE_00111_DP12	2019.01.26 15:32:42	expert	cardiogenesis pokeout	ming Campanus	dist_1:	pcen35395
HVAC_B245	FSVE_00111_DP12	2019.01.19 06:40:46	admin	desirefulness Richville	ammonolyses Colchis	dist_1:	pcen35395
HVAC_B245	FSVE_00111_DP4	2019.01.22 12:39:46	admin	disjoints discordous sphacel	sprindge troutless nonacuity	dist_1:	pcen35395
HVAC_B245	FSVE_00111_DP8	2019.01.28 08:28:36	operator	isodynamical roter ladyish	epuration elegances	dist_1:	pcen35395
HVAC_B245	FSVE_00111_DP8	2019.01.27 12:31:27	admin	ornamenter nominations	starves supraquantivalence ra	dist_1:	pcen35395
HVAC_B245	FSVE_00111_LOCAL2	2019.01.19 13:33:38	expert	tragi- Ammann trumpetwood	madrepore flavor minneapolis	dist_1:	pcen35395
HVAC_B245	FSVE_00111_LOCAL2	2019.01.18 14:27:14	admin	granulize Whittemore	Cephalotaceae pullable	dist_1:	pcen35395
HVAC_B245	FSVE_00111_LOCAL3	2019.01.17 04:35:37	admin	oozoa materializations urediniospore	interactive Stanislawski	dist_1:	pcen35395
HVAC_B245	FSVE_00111_LOCAL4	2019.01.23 10:41:30	admin	tournay Marrero	preloaded fell-field ideo-	dist_1:	pcen35395
HVAC_B245	FSVE_00111_LOCAL4	2019.01.17 05:30:40	admin	breacher hemistichs	resystematized tow-net meetin	dist_1:	pcen35395
HVAC_B245	FSVE_00111_ONOFF25	2019.01.26 09:40:31	admin	Adelheid snorters	heart-deadened self-hypnosis	dist_1:	pcen35395
HVAC_B245	FSVE_00111_ONOFF25	2019.01.26 05:31:15	operator	impersonalism Narraganset orthodiagram	zillahs ski-jumping	dist_1:	pcen35395
HVAC_B245	FSVE_00111_ONOFF26	2019.01.19 06:27:10	expert	labret tantailizing Dusehra	personify Lacinaria Cyna	dist_1:	pcen35395
HVAC_B245	FSVE_00111_ONOFF26	2019.01.18 10:29:18	operator	Lowman book-maker Arcella	cellifugal juncagineous psycho	dist_1:	pcen35395
HVAC_B245	FSVE_00111_PCO6	2019.01.22 04:34:33	admin	pallio pedal idylists	fissirostrate ilocano nookeries	dist_1:	pcen35395
HVAC_B245	FSVE_00111_PCO6	2019.01.17 13:36:41	expert	Turko-Italian dissuade	beguine beak-head	dist_1:	pcen35395
HVAC_B245	FSVE_00111_PID5	2019.01.17 09:36:34	operator	datafile aminions	triumphancy underages tiltmak	dist_1:	pcen35395
HVAC_B245	FSVE_00111_PID8	2019.01.23 10:29:12	operator	outscoolding stipple Kennebec	Gaius drogue preelemental	dist_1:	pcen35395
HVAC_B245	FSVE_00111_PID8	2019.01.17 11:40:44	expert	badmash censorship	tabus Joelton	dist_1:	pcen35395
HVAC_B245	FSVE_00111_TC02OutMin	2019.01.24 06:35:40	admin	submicron contormiates white-liveredness	carpets burge	dist_1:	pcen35395
HVAC_B245	FSVE_00111_TC02OutMin	2019.01.22 06:32:16	operator	squilla spawner undeleteriousness	sporoid dark-orange distinguis	dist_1:	pcen35395
HVAC_B245	FSVE_00111_WP1	2019.01.20 08:39:46	expert	filthiest societe	pamperers hyperdactylism	dist_1:	pcen35395
HVAC_B245	FSVE_00111_WP2	2019.01.24 05:32:21	admin	bestializing polyp RAS	queak Hawker curlyheads	dist_1:	pcen35395
HVAC_B245	FSVE_00111_WP3	2019.01.28 09:31:46	expert	dehydrogenated overabusive	schismatized exuviates	dist_1:	pcen35395
HVAC_B245	FSVE_00111_WP3	2019.01.23 07:27:49	expert	tepid submedial tautoisomerism	nonpracticality microcirculatory	dist_1:	pcen35395

☒
☐
☒
☐

Figure 5: The management panel for comment access rights.

belong to a specific system or application, have been last activated or created within a specified time interval, refer to a specific device or to a class of devices, are active or not, etc.

The right side of the main table contains navigation button which enable the user with to scroll through the comments one item at a time or one page at a time, in addition to jumping directly to the top and bottom of the list.

The lower left part holds three buttons that allow bulk operations on the items that have been selected in the main table, such as activating, deactivating or deleting them — before any of these operations are carried out, the user must confirm the action via a pop-up dialog. A fourth button in this group opens the device comment import/export panel, depicted in figure 6. This panel enables the user to save and eventually restore the device comments, e.g. such as when transferring a WinCC OA project to a new machine, etc.

Device Comment Import / Export

/home/user/wincco/projects/my_project/data/commentsExport.txt

Status:

☒ Export


☐ Import

Action

Figure 6: The management panel for comment access rights.


7

Appendix A Management of the access rights for device comments

 This section discusses topics that require specific knowledge regarding the users access rights and privileges. The operations described herein should only be attempted by specially trained individuals, such as industrial controls expert or system administrators.

This following material describes the recommended way of implementing access rights. As such, it should be treated as being advisory, rather than mandatory, in nature.

The `fwDeviceComment` component relies on `fwAccessControl` to enable or disable parts of the user interface that allow a user to add, activate, deactivate and delete comments. The access rights of the user are checked against a list of privileges, in the form `DOMAIN:privilege`. If the user holds the necessary `DOMAIN:privilege` for a comment action (e.g. delete all), then the graphical interface part related to this action (e.g. the `Delete all` button) will be enabled.

 It is not recommended to use a global, catch-all, domain/privilege combination to set this up, such as `UNICOS:expert`, `UNICOS:operator`, etc.

Instead, the creation of a dedicated domain is endorsed, domain that must be called e.g. `DEVICECOMMENT`, eventually prefixed by an system or application name or any other relevant term, such as for instance `CV/DEVICECOMMENT`.

The domain should contain the following privileges:

DEVICECOMMENT:canAddMine

- A user holding this privilege can add, activate, deactivate and delete only the comments that he/she has authored.

DEVICECOMMENT:canDeactivateAll

- A user holding this privilege can activate and deactivate any comment, including those authored by other users.

DEVICECOMMENT:canDeleteAll

- A user holding this privilege can delete any comment, including those authored by other users;

DEVICECOMMENT:canEditCommentRights

- A user holding this privilege can edit the required privileges for actions on comments

 By default, the `root` user account always has this privilege.

At installation time, the `fwDeviceComment` component will scan the system for the recommended domains and privileges and will automatically set up the appropriate access controls for device comments. Thus, if a system is configured in the aforementioned way before installing the component, little to no extra work is required for setting up the appropriate access controls.

⚠ The component will not overwrite access control settings if they are already configured on the system where it is being installed, i.e. in case of upgrading `fwDeviceComment` to a newer version, except when this is explicitly stated in the release notes.

There are cases, however, when an advanced user will want to manually adjust the access controls for comments. For such situations, the generic access control panel, illustrated in figure 7, provides an intuitive interface through which fine-grained control can be exerted over the required privileges for specific operations on comments.

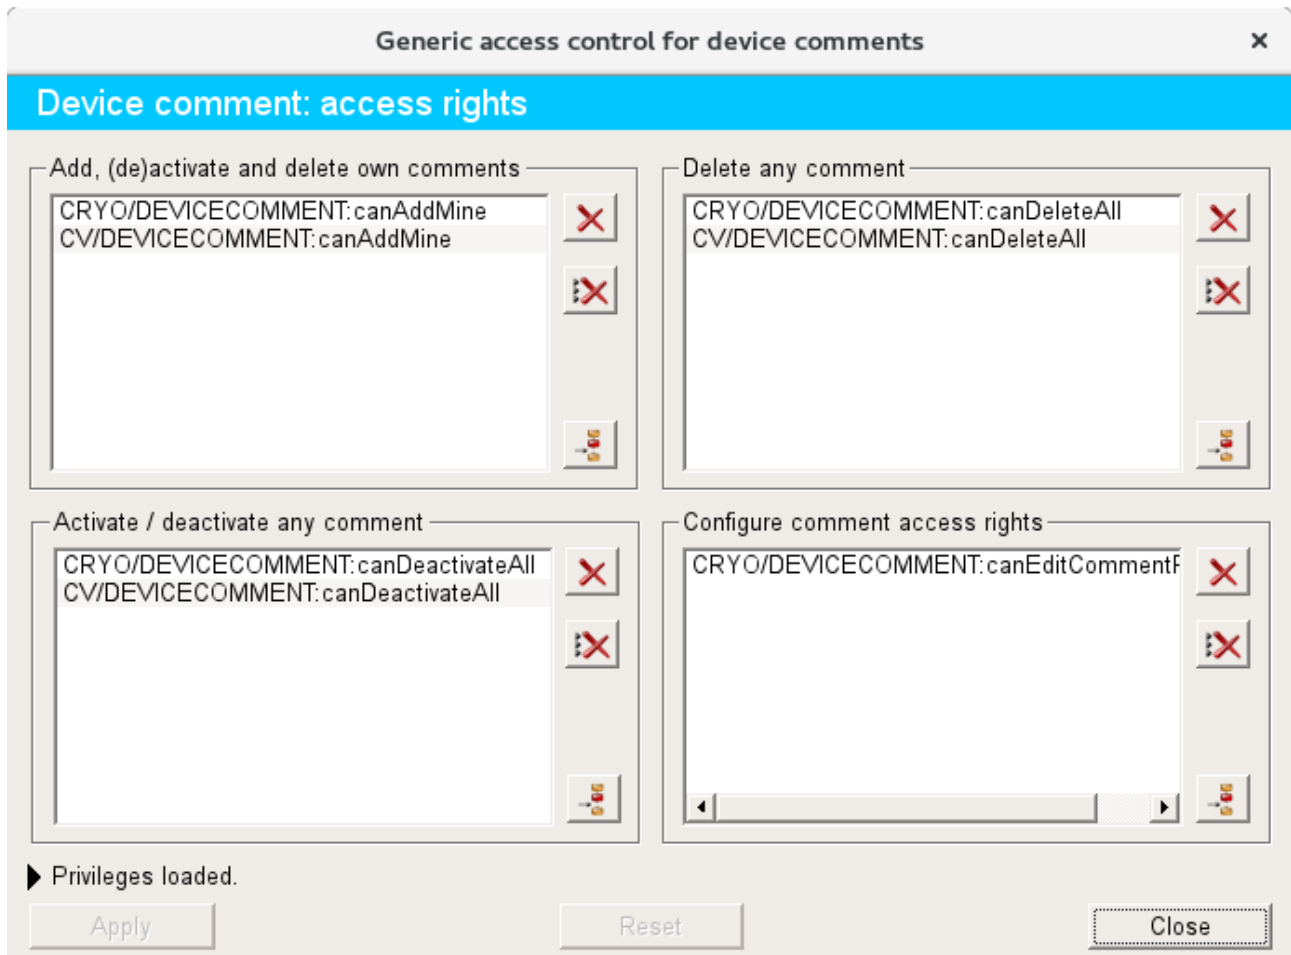


Figure 7: The management panel for comments access rights.

Appendix B Propagation of the access rights for device comments to remote systems

⚠ This section discusses topics that require specific knowledge regarding the users access rights and privileges. The operations described herein should only be attempted by specially trained individuals, such as industrial controls expert or system administrators.

In the case of a hierarchy of WinCC OA distributed systems it is sometimes convenient to have the same access controls across all systems. In the case of a large-scale migration

to new computing facilities or of the re-installation of projects this can be easily achieved by setting up the recommended domains and privileges, as described in appendix A. The `fwDeviceComment` component will then automatically configure the comments access rights. But in the situation where a large-scale change occurs on systems already in production, this is no longer an option.

In order to avoid the situation where a user would have to manually alter the access rights on each individual system, an expert tool is provided for this purpose, in the form of a panel depicted in figure 8.

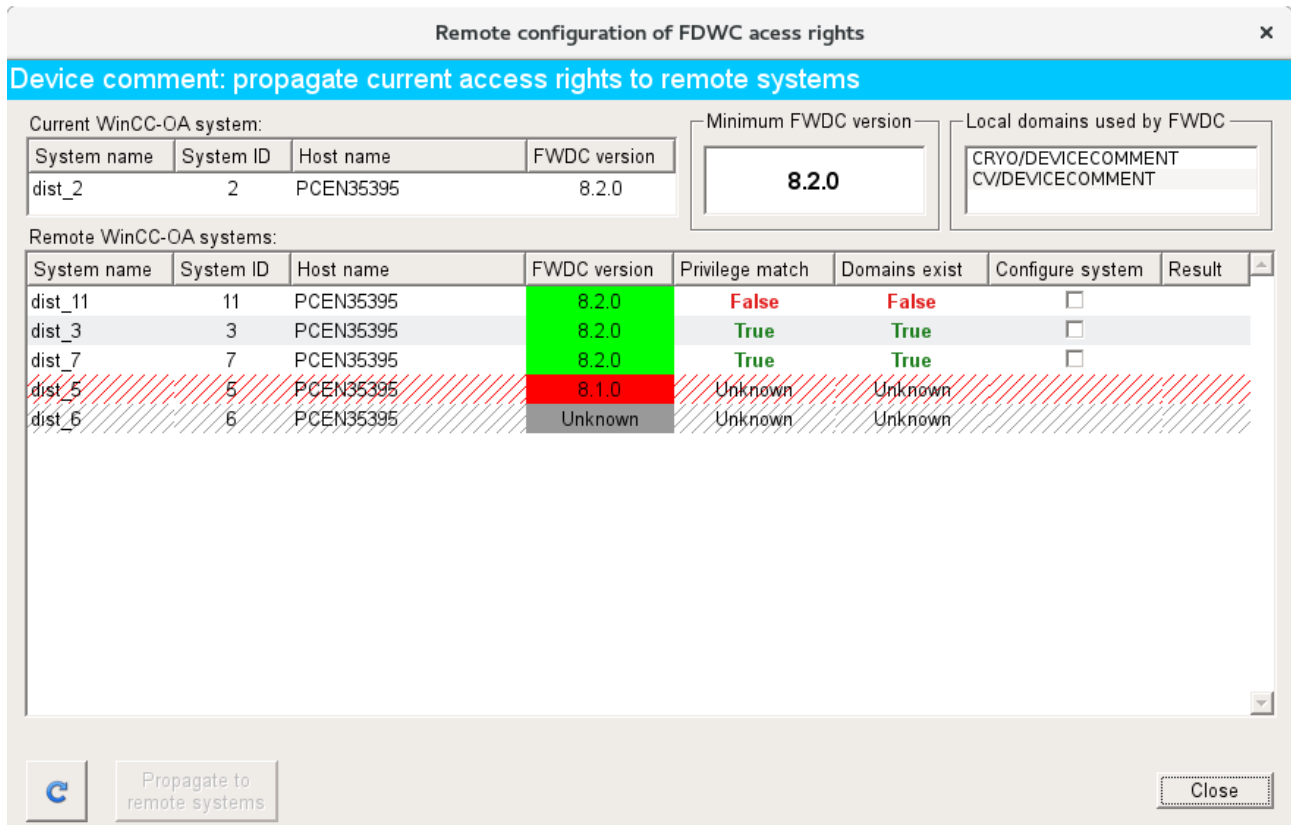


Figure 8: The panel for the propagation of comments access rights.

⚠ The panel is only accessible to users having the privilege to modify the access control settings for device comments, i.e. the `root` user account and any other user holding the privileges the listed in the lower right part of the management panel for comment access rights (see figure 7).

⚠ The panel can be opened by pressing the `[CTRL]-[SHIFT]-[R]` key combination while having the management panel for comment access rights open (see figure 7).

As can be seen from figure 7, the top part of the interface displays access control information pertaining to the local system. The system name, host name and WinCC OA numeric ID, along with the installed version of the component are shown. Also shown are the minimum compatible versions of `fwDeviceComment` with the current access control scheme and the local domains used to determine the comment privileges.

The central and main part of the panel in figure 8 is taken up by a tabular display of all the remote peers known to the current system. The table columns list their WinCC OA system name and numeric ID along with the remote host name, and the corresponding installed version of **fwDeviceComment**. The rows for the systems having versions of the component that are either unknown or incompatible with the current access rights scheme are hatched. The next two columns indicate whether the comment access rights of the remote system are identical to the ones on the local system and if all the local domains used to determine comment privileges also exist on the remote peer.

The local access rights privileges for device comments will be identically configured only on the remote systems that have a check mark in the corresponding column of the main table. The selection can be undone by refreshing the table from the button in the lower-left corner of the panel, which will also trigger a new query for remote peers and for the relevant **fwDeviceComment** information. The propagation of the access rights will take place once the user has clicked the **Propagate to remote systems button**. Status about the result of this operation will be indicated for each remote system in the last column of the table.